



# PREMADE

## Tile Shower Tray System

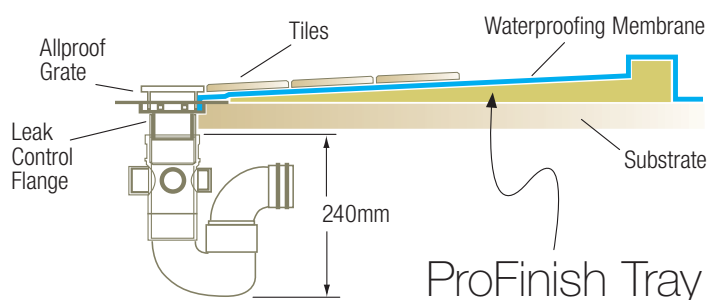

“INSTANT SLOPE”  
for your tile shower

### Advantages

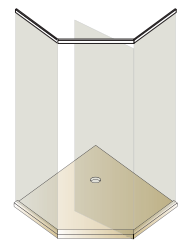

- Standard and custom options give you creative freedom
- Install tray and waterproof within 24HRS - “Tiler ready”
- Flexible waste position
- 20 year guarantee when protected from water by an approved waterproofing membrane
- Removes the need for structural changes
- Creates a professional finish every time
- Suitable for use with a number of major waterproofing products
- Guaranteed 1:30 slope to waste
- Acoustically superior to sand and cement

## Custom Tray

Custom tray options give you flexibility with size, shape and waste position. Contact your local retailer for a specification sheet or call: NEWLINE 0508 639 5463.

## Standard Tray Options

*NOTE: All trays are available with a choice of either a 60mm x 60mm HOB or 100mm x 60mm HOB. If a 100mm x 60mm HOB is used, tray dimensions will be an extra 40mm on the sides where there is a hob. Waste position can be moved within a 75mm radius of centre.*

2-Sided		2-Sided		2-Sided		3-Sided		3-Sided		Neo Angle	
SIZE	WASTE POSITION FROM REAR WALL	SIZE	WASTE POSITION FROM REAR WALL	SIZE	WASTE POSITION FROM REAR WALL	SIZE	WASTE POSITION FROM REAR WALL	SIZE	WASTE POSITION FROM REAR WALL	SIZE	WASTE POSITION FROM REAR WALL
820 x 820 915 x 915 1000 x 1000	400 x 400 450 x 450 500 x 500	900 x 750 1200 X 915	450 x 375 600 x 450	1200 x 1000 1400 x 1000	600 x 500 700 x 500	1200 x 1000 1400 x 1000	600 x 500 700 x 500	810 x 810 910 x 910 1000 x 1000	400 x 400 450 x 450 500 x 500	905 x 905 955 x 955 1055 x 1055	400 x 400 450 x 450 500 x 500

## Material Properties and Testing

- Manufactured of rigid Polyurethane
- Compressive strength – 229 kg to create 1mm of deflection - 2193 kg to create 2mm of deflection
- Cyclic testing – 36589 cycles (4 showers a day for 25 years) were carried out to simulate the use of the tray as a waterproofing substrate in a shower – *'no visual failures were observed to the applied waterproof membrane or ProFinish Tray'*.
- Elongation to tensile failure >3mm

## Waterproofing & Warranty Guide

Below are listed a number of Waterproofing companies. These companies have approved the ProFinish™ Tile Tray for use with their waterproofing system.

ARDEX: WPM001 & WPM300

MAPEI:  
Mapegum WPS  
& Mapelastic/Mapelastic Smart

ASA:  
Dampfix 2, 3, PU & Waterbase.

JAYDEX: Elastiik

WET-SEAL: Wetseal

LATICRETE: 9253

PROTECTO WRAP: AFM/WN

EQUUS: Chevaline Dexe

CONSTRUCTION CHEMICALS:  
Liquid Flash II

H B FULLER: WPM101

FLEXCO:  
Flexi-seal 2 Part Liquid Membrane

Warranties may change, please check with the manufacturer for specific terms and conditions.

## Installation Guide

1. Before you begin, make sure the floor is clean, free of dust and is a level flat surface.
2. Place the ProFinish™ tray in position and mark the external perimeter of the tray, and the position of the waste flange with a pencil.
3. Remove the tray and fit the waste flange to the outlet in the floor.
4. Once the plumbing & the flange have been installed, place the ProFinish™ tray back into position, use a sharp knife to cut around the outside of the waste flange until the tray fits neatly around the waste flange outer perimeter.
5. Lift the base and apply the adhesive supplied within the marked tray perimeter, using a 60mm grid pattern commencing 25mm in from the outer edges.
6. Ensure adhesive is applied to the sill ends - providing sill to wall joint adhesion.
7. Fit back into place and press firmly over the entire surface. To ensure better adherence it is suggested that the tray be weighted to the floor for at least 1 Hour.
8. Once the tray is secured to the floor, it is ready for the application of your choice of waterproof membrane.



Listed on the right, are waterproofing manufacturers who have approved their product for application to the ProFinish™ tray. Please ensure your waterproofer or tiler uses one of these products.

9. Apply the waterproof membrane according to the manufacturer's instruction. Ensure water proofing is applied down into the waste flange and up the inside vertical face of the tile sill (hob), across the top edge and down to the floor line on the outside of the ProFinish™ tray. Where frameless doors are to be fitted it is recommended that floor areas outside the shower should also have a waterproofing membrane applied, prior to tiling.

10. Tile the shower with your choice of bathroom tiles.

11. Door and Glass installation: In most cases Newline is able to provide a list of companies who can install the Glass Surround.

Newline Help Line:  
0508 NEWLINE / 0508 639 5463

Typically the cost to waterproof a tray and shower box area is \$250 - \$350.00, this will vary due to location and the specific design and size of the shower. Typical cost for installation of the glass surround is \$250 - \$400.00.